

Solar temperature and humidity thermometer Manual(DT-6/7)

Function[®]

- Measuring both indoor and outdoor temperature ;(DT-6 only measure the inside temperature);
- Display inside simultaneously and body comfort;
- Max./Min. temperature and humidity value memory;
- Switch between indoor and outdoor temperature displayed(DT-7)

Technical parameters

- Indoor temperature: 0°C~50°C (32°F~122°F) outdoor temperature: -50°C~70°C (-58°F~158°F)
- Relative humidity: 20%RH~99%RH

Operation Description

- **MAX/MIN**
- ◆ In indoor temperature ,press **MAX/MIN** key, will display the MAX indoortemperature and humidity, then press **MAX/MIN** key again will display MIN indoor temperature and humidity;
- ◆ In outdoor temperature ,press **MAX/MIN** key, will display the MAX outdoor temperature and indoor humidity, then press **MAX/MIN** key again will display MIN outdoor temperature and indoor humidity ;
- ◆ Pressing **MAX/MIN** key 2 seconds , will clear all the memory.
- **°C/°F**
- ◆ Switch between °C/°F
- **RESET** (DT-6)
- ◆ Reset function
- **IN/OUT** (DT-7)
- ◆ Switch between Indoor and outdoor temperature
- Comfort indicators will display the level as comfortable , wet or dry. The table is shown below:

